



CENTER PANELS FLAT ON BENCH

STEP 1

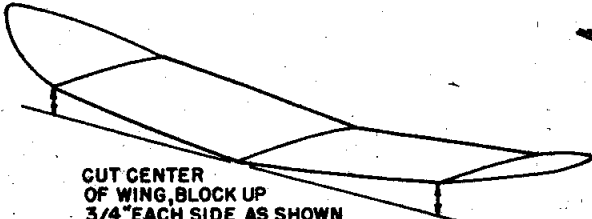


STEP 2

SKETCHES ARE NOT TO SCALE

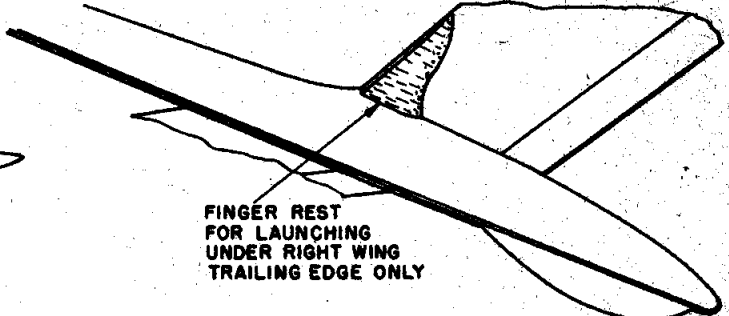

**LARRY CONOVER'S 'FLANGER'**  
PLAN IS FULL SIZE

WING LEADING EDGE OF BASS OR HARD Balsa  
MAIN PORTION IS LIGHT 'C' STOCK  
FINISHED WITH 3 COATS SANDING SEALER, WAXED

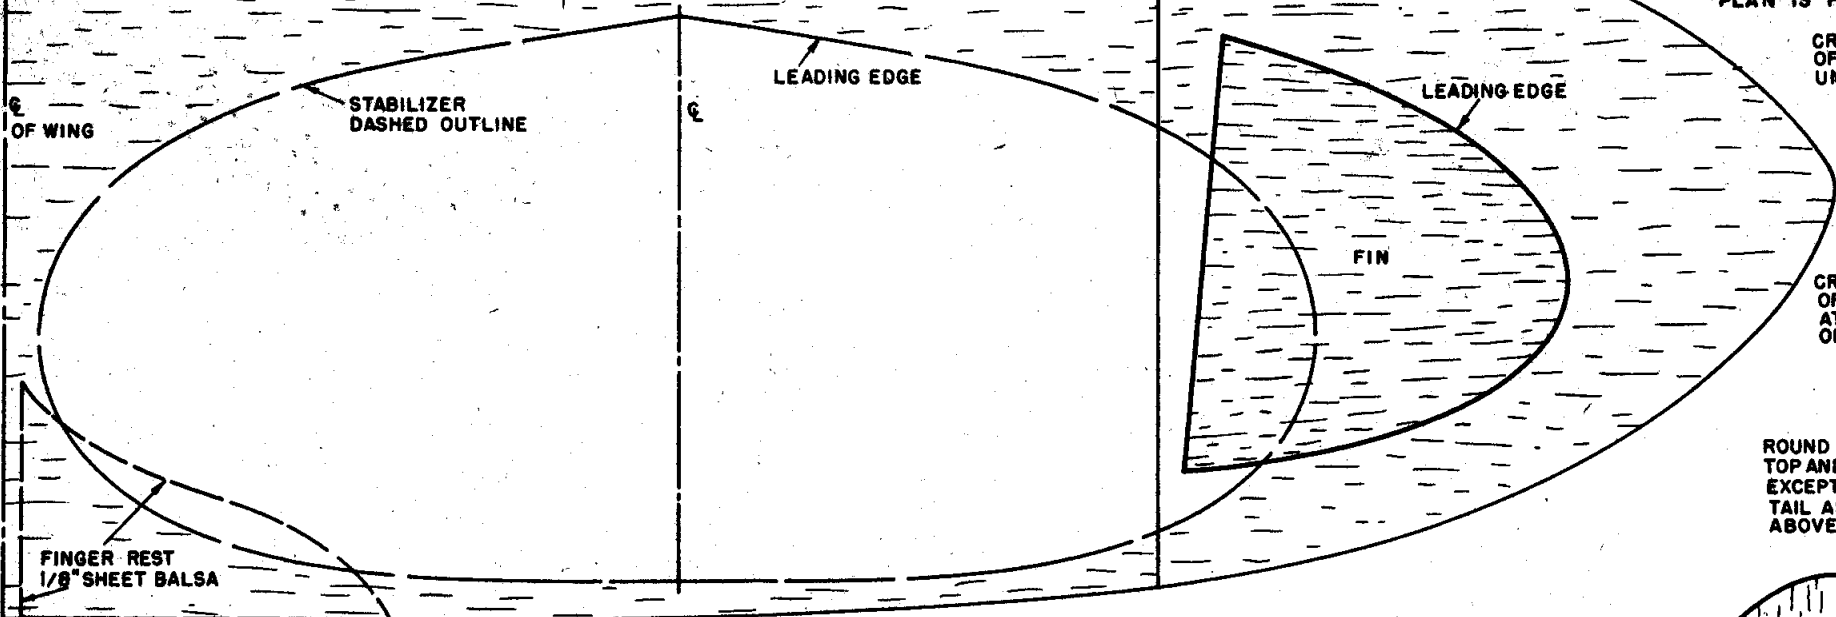


CROSS SECTION OF FUSELAGE UNDER WING

CROSS SECTION OF FUSELAGE AT LEADING EDGE OF RUDDER

ROUND OFF FUSELAGE TOP AND BOTTOM AS EXCEPT AT WING AND TAIL AS SHOWN ABOVE.

SLIVER OF Balsa AS A FILLER

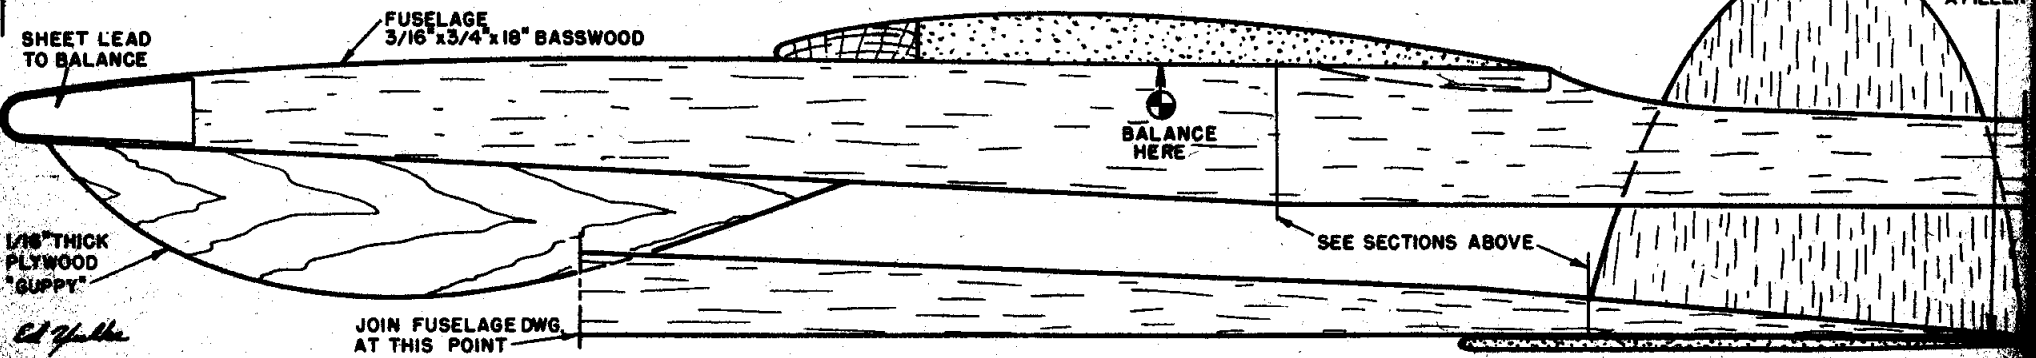

1/16" THICK PLYWOOD 'GUPPY'

*Ed Miller*